



MOTOROLA

Download Apps Instructions

NEXTEL[®]

Over-the-Air downloading is an exciting new technology that will enable you to download Java applications wirelessly and from the convenience of your home or business at virtually anytime.

Download Apps is the transport application that enables you to download an assortment of Java applications, over the air and right to your phone without the need of a cable.

Download Apps may be pre-installed on your phone as part of Java Apps. Visit www.nextel.com/idenupdate to personalize your phone with exciting Java applications from business tools to games. If your phone did not come with Download Apps installed, you may download it from the www.nextel.com/idenupdate website by selecting it from the applications catalog.

NOTE: When downloading the Download Apps application, 27k of data memory space will be required for download. Once downloaded, you will need 65k of Program memory space for installation and 3k-5k of Data memory space free to install the application. (Memory requirements are model number dependent). You may need to deinstall an application of the required size from the Java Apps menu in order to make memory space available. (See "Deinstalling an Application" on page 9).






 


Please check your phone's Java memory before downloading any applications.

NOTE: Java application data and Voice Notes share the same memory space on your phone. Using a large amount of memory to store Voice Notes reduces the space available for Java application data. You can create more memory space to download Java applications by deleting stored Voice Notes. In addition, Program memory space and Data memory space are needed for the installation.

NOTE: While an over-the-air download action is taking place, your phone will not be able to receive any phone, Private or Group Calls.

Checking Your Phone's Memory Status

To check how much memory your phone has available:






1	From the idle screen, press  . The main menu displays.
2	At the Main Menu screen, press  to scroll to Java Apps , and then press  under SELECT.
3	At the Java Apps screen press  to scroll to Java System and press  under SELECT. The Java System screen displays.
4	At the Java System screen, press  under NEXT. View the Data and Program space to confirm you have the necessary space for your task.
5	After viewing the information, press  under BACK.
6	Press  under DONE.



WARNING




 






To avoid personal injury, do not use this application on the phone when operating machines, or driving vehicles. This application is licensed to run on Motorola's iDEN® Java-enabled phones only. Unauthorized copying, reproduction or rental public performance of this application is prohibited.

Starting the Download Apps Application

1	From the idle screen, press  . The main menu displays.
2	At the Main Menu screen, press  to scroll to Java Apps , and then press  under SELECT.
3	At the Java Apps screen, press  to scroll to Download Apps .
4	Press  under RUN. The Downloads Apps screen displays.
5	Select Free Applications, New Purchases, Re-Downloads, Available Memory or Help categories.



Free Applications



Download Apps allows users to download a variety of applications free of charge.

1	At the Download Apps screen, press  to scroll to Free Applications , and then press  under SELECT .
2	At the Free Applications screen, press  to scroll to the application category of your choice and press  under SELECT . After the free applications are located on the network they will display on your screen. NOTE: Different phone models may have a different set of available applications.
3	At the specified category screen, press  to scroll to the application you want to download and then press  under SELECT . The App Details screen displays.
4	At the App Details screen, press  to scroll through the application's detailed information. This screen will help you determine the size of the application you are about to download.
5	To select the application, press  under GET IT . After the application downloads, a Thank You screen displays. To immediately download another application, press  under MAIN . For instructions on how to install applications, see "Installing Downloaded Applications" on page 6.
6	To cancel the download, press  under CANCEL .


New Purchases


New purchases will list those applications you have bought from the www.nextel.com/idenupdate website.


1 At the **Download Apps** screen, press  to scroll to **New Purchases**, and then press  under SELECT. After the applications are located on the network, they will display on your screen.

2 At the **New Purchases** screen, press  to scroll to the application you want to download and then press  under SELECT.

If there are no applications listed on the **New Purchases** screen, the phone screen will confirm that no new applications have been purchased for this phone.









3 At the **App Details** screen, press  to scroll through the application's detailed information. This screen will help you determine the size of the application you are about to download.

4 To select the application, press  under GET IT. After the application downloads, a **Thank You** screen displays. To immediately download another application, press  under MAIN. For instructions on how to install applications, see "Installing Downloaded Applications" on page 6.





5 To cancel the download, press  under CANCEL.

Re-Downloads

Once downloaded, all applications are available for re-download free of charge and can be re-downloaded as many times as you desire.



- | |
|--|
| <p>1 At the Download Apps screen, press  to scroll to Re-Downloads, and then press  under SELECT. After the applications are located on the network, they will display on your screen.</p> |
| <p>2 At the Re-Downloads screen, press  to scroll to the application you want to re-download and then press  under SELECT.</p> |
| <p>3 At the App Details screen, press  to scroll through the application's detailed information. This screen will help you determine the size of the application you are about to download.</p> |
| <p>4 To select the application, press  under GET IT. After the application downloads, a Thank You screen displays and then you are returned to the Java Apps screen. To immediately download another application, press  under MAIN. For instructions on how to install applications, see "Installing Downloaded Applications" on page 6.</p> |
| <p>5 To cancel the download, press  under CANCEL.</p> |

Installing Downloaded Applications

- 1 At the **Thank You** screen, press  under EXIT. The **Java Apps** screen displays.
- 2 To select the application to install, press  to scroll to the downloaded application, and then press  under INSTALL. After the application installs, press  under DONE.

Available Memory

The **Available Memory** screen allows you to see the amount of free memory space your phone currently has.

At the **Download Apps** screen, press  to scroll to **Available Memory**, and then press  under SELECT. The **Available Memory** screen displays. It contains the amount of memory available for data and program space.

NOTE: Data memory is mainly used for downloading while Program memory is mainly used for installation.

Understanding Memory Errors


There are two types of memory errors you may receive:

- Memory Error
- Memory Warning

Memory Error


A Memory Error refers to the memory needed to download an application to your phone. It is necessary for you to deinstall an application of a particular size, or delete some Voice Notes to free up the necessary memory.

If you receive a Memory Error:


- 1 At the **Memory Error** screen, press  under History.

NOTE: The Download History screen helps you determine which applications are loaded into your phone by providing you with a list of your past download apps and their memory sizes. You can also use this information in case your phone runs low on memory, to determine which application to deinstall. This way you can avoid going through your Java inventory to locate the size of your downloaded applications.

There are two options while in the **History** screen:

- 2 Select another application with sufficient memory to download by pressing  under MAIN and to go to the **Download Apps** main screen.


Or,

Press  under EXIT. If you wish to download an application, you must first deinstall an application of the required size from the Java Apps Menu, or you may have to delete voice notes and/or voice related files in order to make memory space available. (See “Deinstalling an Application” on page 9).


Memory Warning

A Memory Warning refers to the memory needed to install an application on your phone. You will be able to download but not install an application. You will need to delete some Voice Notes or deinstall applications to install the downloaded application.

If you receive a Warning:


- 1 At the **Warning** screen, press  under History.

Or,


Continue to download by pressing  under GET IT.
(Warning screen only).

NOTE: The Download History screen helps you determine which applications are loaded into your phone by providing you with a list of your past downloaded apps and their memory sizes. You can also use this information in case your phone runs low on memory, to determine which application to deinstall. This way you can avoid going through your Java inventory to locate the size of your downloaded applications.

There are two options while in the **History** screen:








- 2 Select another application with sufficient memory to download by pressing  under MAIN and to go to the **Download Apps** main screen.

Or,

Press  under EXIT. If you wish to download an application, you must first deinstall an application of the required size from the Java Apps Menu, or you may have to delete voice notes and/or voice related files in order to make memory space available. (See “Deinstalling an Application” on page 9).



Deinstalling an Application

To deinstall an application:

1	At the Java Apps screen, press  to scroll to the application you want to deinstall and then press  .
2	At the Java Apps Menu screen, press  to scroll to DEINSTALL and press  under SELECT .
3	When prompted with a confirmation question, press  under YES .
4	When prompted with a warning message, press  under OK .
5	After the application has deinstalled, press  under DONE .

Help

The Help section provides instructions in the following area: Memory Requirements, Downloading, and Installing.

At the **Download Apps** screen, press  to scroll to **Help**, and then press  under **SELECT**. The **Help** screen displays.

For online assistance, visit nextel.com and click on **Contact Us** to send us an email request. Our representatives are committed to assisting you. Every effort will be made to address your questions or concerns within 24 hours. Or call us at 1-800-639-6111 or dial 611 from your Nextel phone.

MOTOROLA, the Stylized M Logo, and all other trademarks indicated as such herein are trademarks of Motorola, Inc. ©Reg. U.S. Pat. & Tm. Off. © 2001 by Motorola.

All other product or service names are the property of their respective owners. All Rights Reserved.

© 2001 Nextel Communications. Nextel, the Nextel logo, and all other Nextel product and/or service names referenced throughout this guide are either a trademark, service mark or registered trademark of Nextel Communications, Inc. All rights reserved.